

NRF CONNECT PROCEDURE

Connect to your Cowboy and make sure it's connected and paired.

Go to Nordic UART Service Send the 3 values below to RX Characteristic.

1. change values controller mode and/or field weakening
2. store data
3. close flash

So, practically

Connect to your Cowboy and make sure it's connected and paired.

Close your COWBOY app

Open the nRF connect app and find the COWBOY (without the DFU tekst in the circle)

Go to Nordic UART Service Send the 3 values below to RX Characteristic.

1. Enter the following in New Value (**field weakening 20%**): as Byte Array
0110008100010203f8a4
Press Send

OR

If you prefer **field weakening 15%**

011000810001020266390b

Press Send

2. Enter the following in New Value (store data in flash): as Byte Array
011001ff0001027ffc2ef
Press Send
3. Enter the following in New Value (close flash memory): as Byte Array
011001ff0001020000a29f
Press Send

COWBOY UNTAMED PROCEDURE

If you are on Android

1. make sure to install the COWBOY app from play store.
2. Log on the COWBOY app
3. If you did not make an account, make one
4. If you can lock and unlock your bike with the COWBOY app
5. Close the COWBOY app
6. Install Cowboy Untamed

from


https://github.com/Imaginous/Cowboy_Untamed

or

direct link

https://github.com/Imaginous/Cowboy_Untamed/releases/download/V3.61/cowboyuntamed_v3_61.apk

[big thanks tot he developer Michel (aka Imaginous on github)]

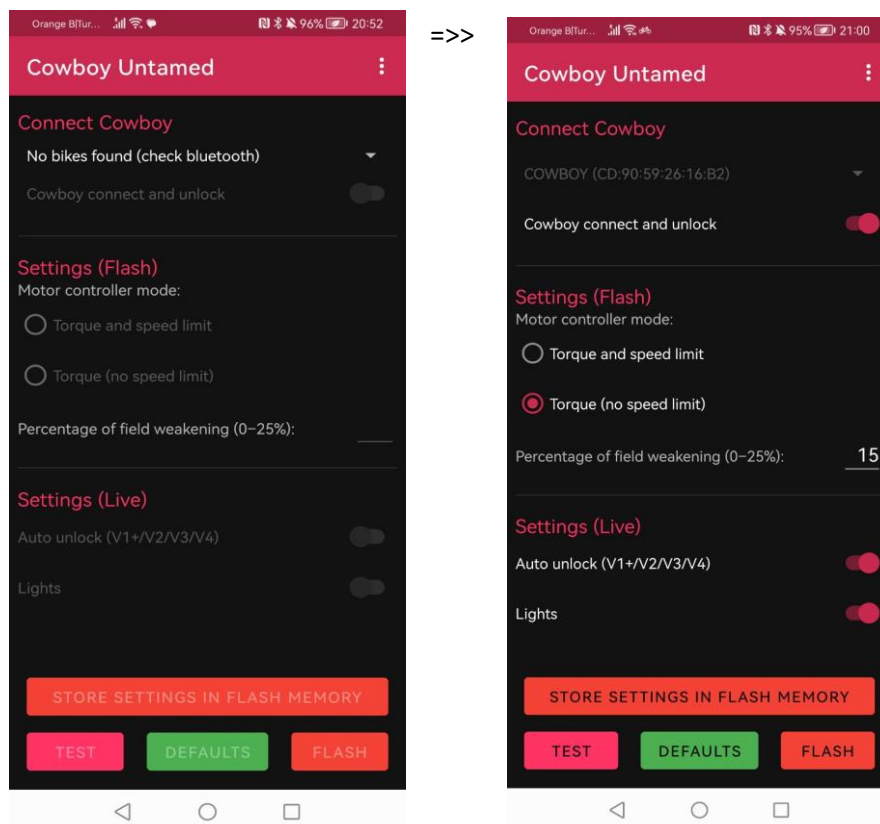

7. Open the Cowboy Untamed app
8. Change values as preferred
9. Click **store settings in flash memory**
10. Click on **flash** button

I tried these settings with my C3 and i'm very happy with the settings